



# Photocatalytic Air Purification PCF Exterior

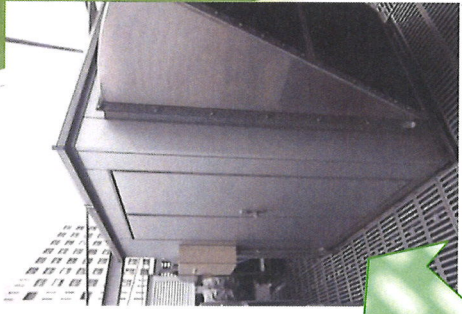

【Outlet】





【Inlet】

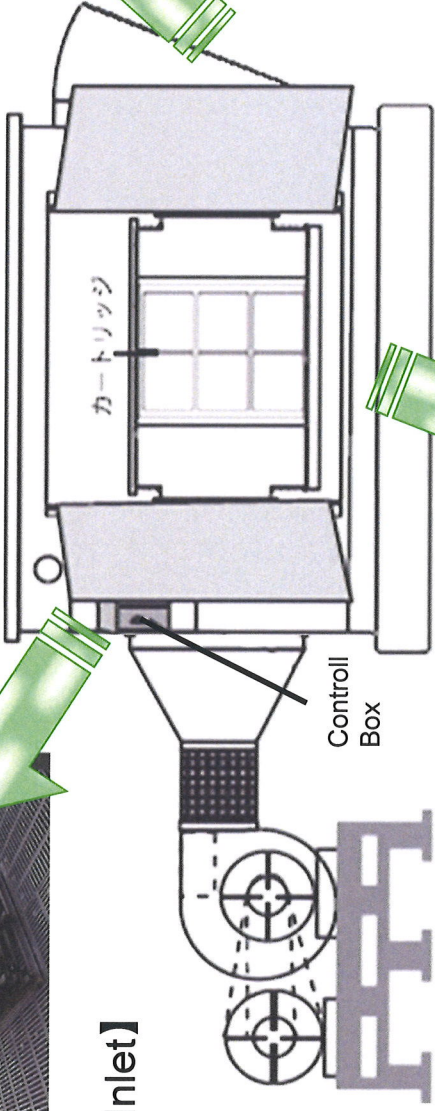


【Front】

# Photocatalytic Air Purification PCF Inside structure

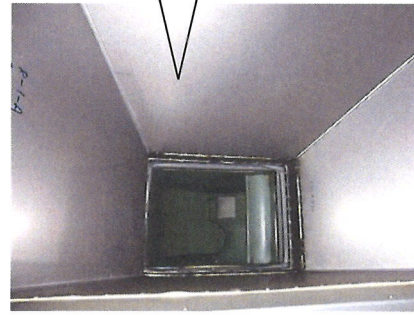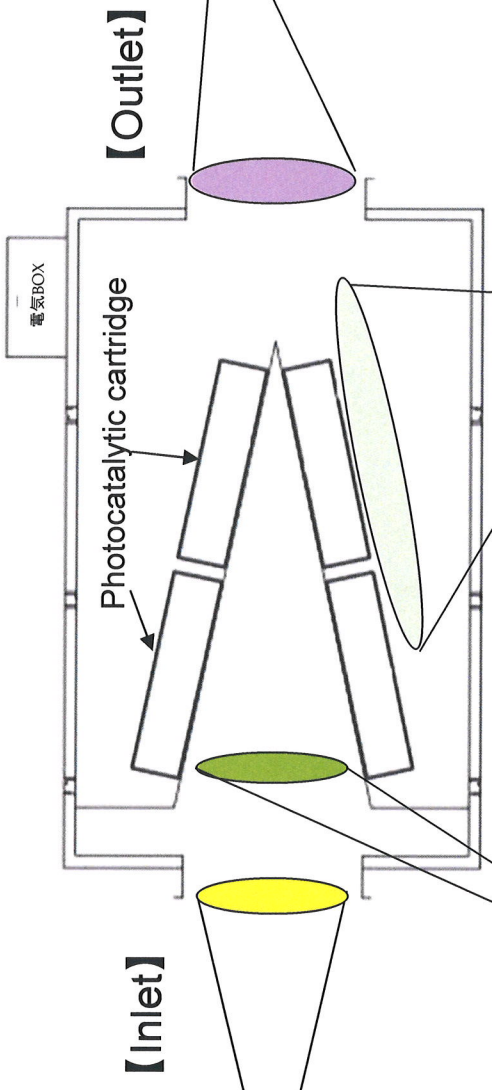


**【Inlet】**

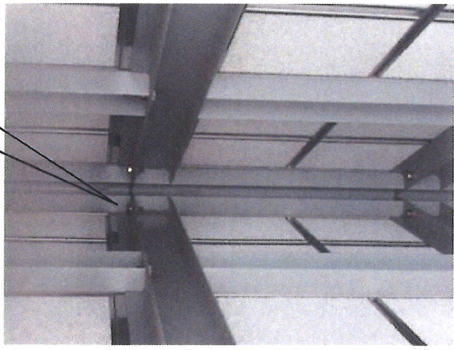

**【Inside of inlet】**




**【Inside of outlet】**


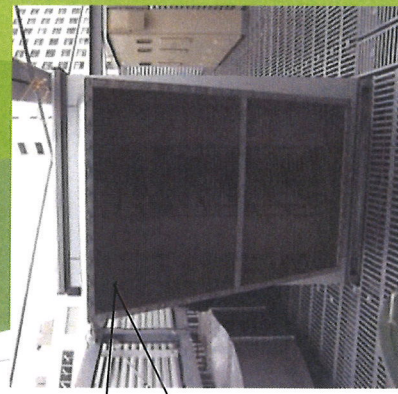


**【Outlet】**


# Photocatalytic Air Purification PCF Cartridge

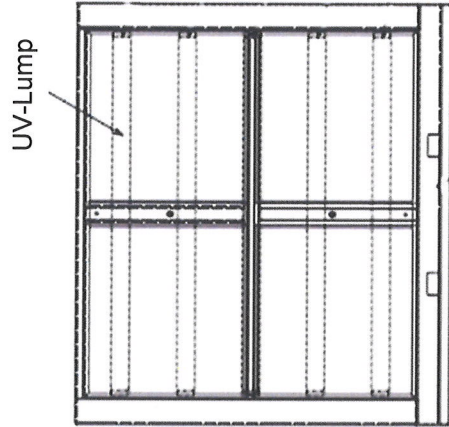



Photocatalytic cartridge

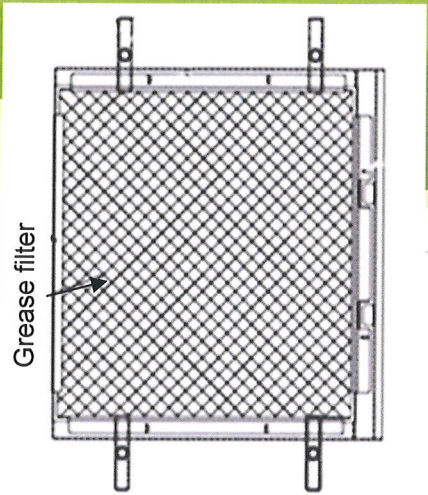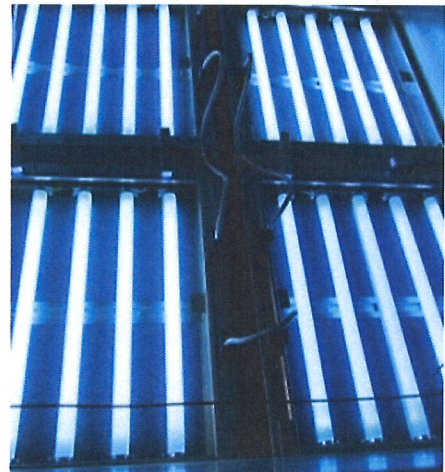

Grease filter

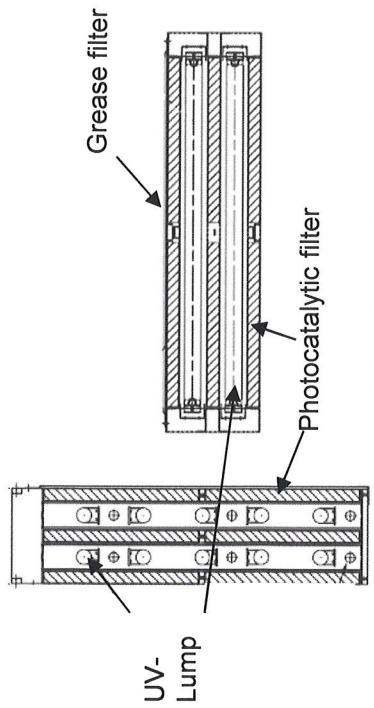


Photocatalytic cartridge

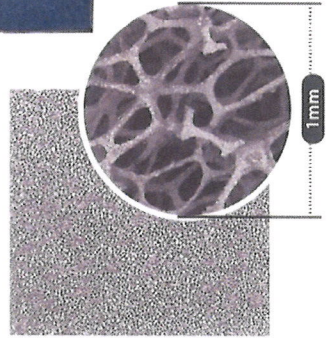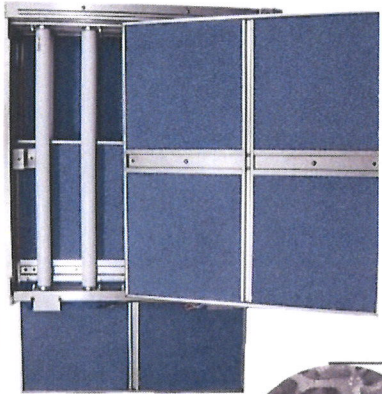

Photocatalytic filter


# Easy maintenance

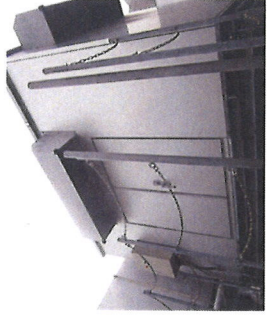

Cleaning of grease filter (2/Year)

Inversion of photocatalytic filter (1/Year)


Change UV lamp (1/Year)

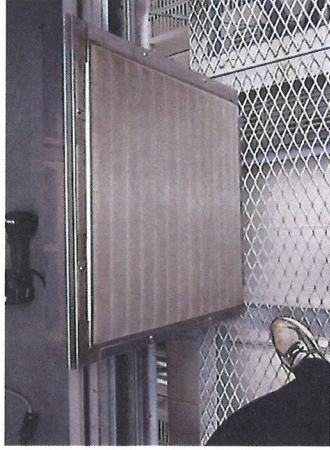

Photocatalyst cartridge



Removal of grease filter

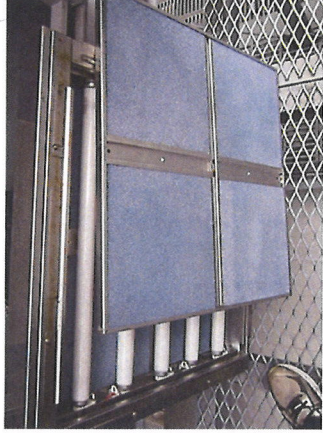

Removal of UV lamp



Set of UV lamp



Removal of photocatalytic filter

